


Mitsubishi Evo 1 - 3 ECU Connections

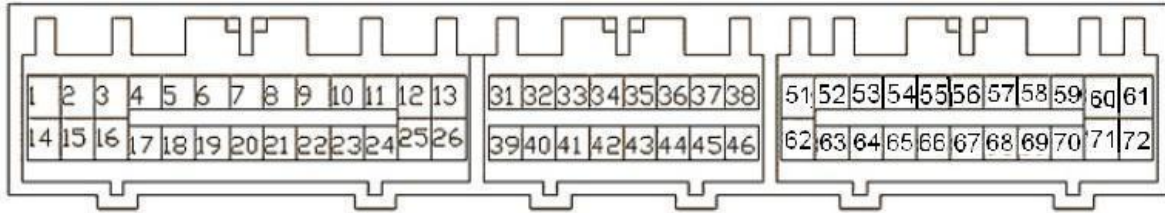

View on wire side

1 INJECTOR 1	Y - L		31 IGN AMP TACHO SIG W		51 START	B - Y	
2 INJECTOR 3	L - G		32		52 AIR TEMP	R - B	
3 RADIATOR FAN	G - B		33 FUEL PRESS SOL W - B		53		
4 IDLE SERVO 1	L		34 OCTANE ADJUST B - L		54 EXHAUST TEMP +	R	
5 IDLE SERVO 4	W		35		55		
6 SEC AIR SOL	G - W		36 ECU W/L LG - R		56 LAMBDA	W	
7			37 PAS SWITCH Y		57 EXHAUST TEMP -	W	
8 FUEL PUMP RELAY	W - R		38 ECU RELAY B - L		58 KNOCK SENSOR	W	
9 ALARM W/L	L - B		39		59		
10 IGN AMPLIFIER A	Y - W		40 WASTE GATE SOL L - W		60 BACK UP SUPPLY	B - Y	
11 FAN RELAY	G - W		41 TURBO W/L * G - B		61 VREF 5V	G - R	
12 12V SW SUPPLY	R		42 DIAGNOSTICS Y		62 IGN SW SUPPLY	B - W	
13 GROUND	B		43 DIAGNOSTICS G - W		63 WATER TEMP	Y - G	
14 INJECTOR 2	Y - B		44		64 TPS	G - W	
15 INJECTOR 4	LG - W		45 A/C COMP RELAY G - Y		65 BARO PRESS	P	
16 RADIATOR FAN	L - Y		46		66 ROAD SPEED	Y - W	
17 IDLE SERVO 3	Y				67 IDLE SWITCH	Y - R	
18 IDLE SERVO 6	G				68 TDC SENSOR	W	
19 AIR FLOW RESET	L		* Evo 1 & 2 only ?		69 CRANK SENSOR	B	
20					70 AIR FLOW SENSOR	W - B	
21					71 GROUND	B	
22 A/C COMP RELAY	B - W				72 SENSOR GROUND	B	
23 IGN AMPLIFIER B	Y - R						
24 REAR SCREEN "ON"	B - L						
25 12V SW SUPPLY	R						
26 GROUND	B						